

# BannerUp Plus

## QuickChange Banners

Your BannerUp Plus includes an exclusive Patented Interchangeable QuickChange banner system. No need to ship your display back, anyone can change banners in minutes...anywhere! Our interchangeable QuickChange Banner system allows you to simply slide one banner out and the next one in!



### FOR MORE INFORMATION

on QuickChange Banners call:

**tradeshow-stuff.com**

your source for everything tradeshow!

800.969.9913

www.tradeshow-stuff.com

# HOW TO CHANGE YOUR BANNER



## 1 REMOVE

Roll the old banner out of the cassette.



2 Insert the locking pin.



3 Slide the banner out.

## REPLACE

Slide the bottom rail into the cassette.



5 Hold the banner and remove the locking pin.

Never pull out the "Locking Pin" until a banner is loaded into the cassette



6 Let the banner slowly roll into the cassette.

**Never pull out the "Locking pin" until a banner is loaded into the cassette!**

This will immediately release the spring tension and can damage the mechanism.



**Important!**

Roll banners print-side in.

# HOW TO ASSEMBLE YOUR BANNER

**ST (3ft.)  
LG (40in.)**

1. Take out BannerUp from the bag.
2. For increased stability pull out the four support legs on the cassette.
3. Take two of the pole sections (start with the untapered) and mount these on the cassette.
4. Pull the banner halfway out of the cassette. Hook the third pole section to the top rail of the banner. Push the banner up to full height to complete pole assembly.

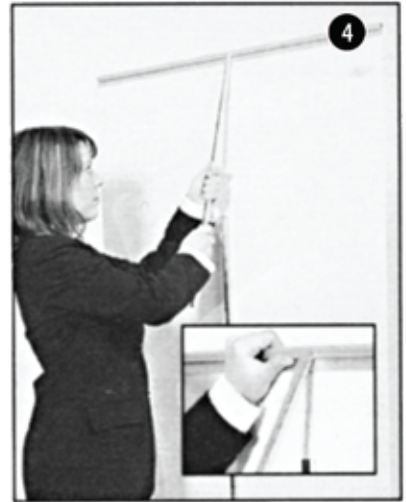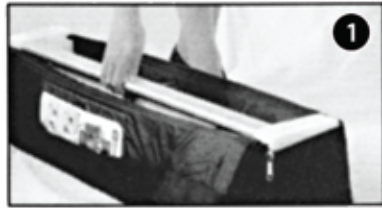


**XL (4ft.)  
EX (5ft.)**

1. For increased stability pull out the four support legs on the cassette.
2. Mount all six pole sections on the cassette (start with the untapered).
3. Pull the banner up to full height and hook the poles to the top rail of the banner.




## TENSION ADJUSTMENT

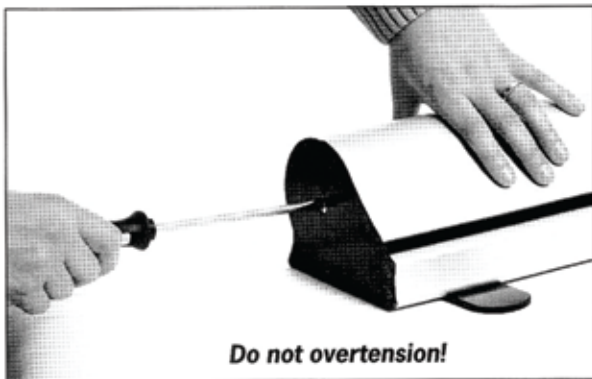

All cassettes are pretensioned before delivery.

If adjustment is needed, hold the cassette firmly in place then depress and turn the adjusting screw clockwise to increase the tension (the tension mechanism adjusts in halfturn increments). Slowly release pressure on the screw turning slightly counter-clockwise and allow it to again lock in place. If tension has been lost completely, we recommend 20-25 full clockwise turns.

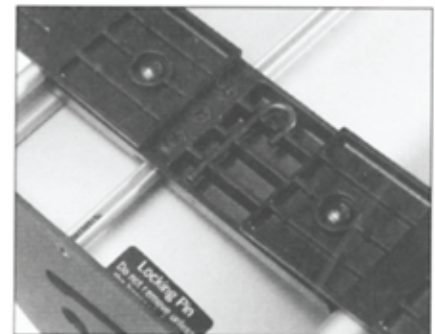

**Please find more  
"Locking Pins"  
under the feet.**

**Never pull out the "Locking pin" until a banner is loaded into the cassette!**

This will immediately release the spring tension and can damage the mechanism.

**Important!**

Roll banners *print-side in*.